




Operating and Maintenance Instructions Manual

Series VE26

Pipe/Tubing Roll Grooving Tool

VE26S, VE26SS, VE26P, VE26C, VE26BC, VE26DIN, and VE26AC
Manual Feed, In-Place Roll Grooving Tools
Adaptable for Motorized, Semi-Automatic Option

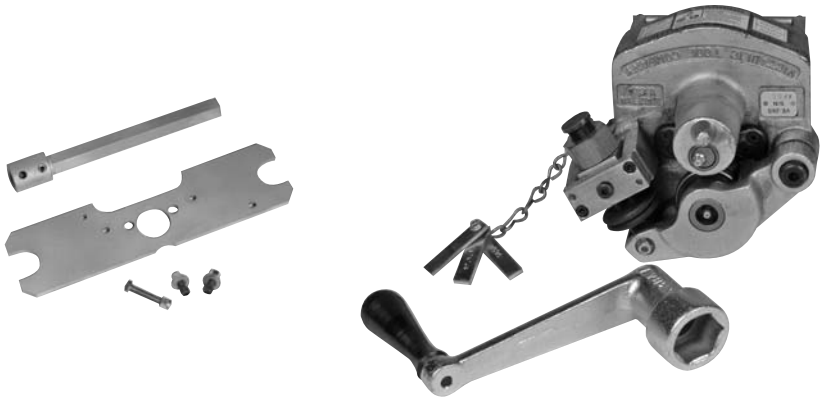

Patented and Patent Pending

WARNING



Failure to follow instructions and warnings could result in serious personal injury, property damage, and/or product damage.

- Before operating or servicing the VE26 Roll Grooving Tool, read all instructions in this manual and all warning labels on the tool.
- Wear safety glasses, hardhat, foot protection, and hearing protection.
- Save this operating and maintenance manual.

If you need additional copies of any literature, or if you have questions concerning the safe and proper operation of this tool, contact Victaulic Tool Company, P.O. Box 31, Easton, PA 18044-0031, Phone: 1-800-PICK VIC, e-mail: pickvic@victaulic.com.

INDEX

Hazard Identification	2	Accessories	25
Operator Safety Instructions	3	VAPS 112 Victaulic Adjustable Pipe Stand	25
Introduction	5	VAPS 224 Victaulic Adjustable Pipe Stand	25
Receiving the Tool	5	VPD752 Power Drive	25
VE26 Container Contents	5	Troubleshooting	26
Optional Power Drive Kit Contents	5	General and "In-Place" Grooving	26
Power Requirements for VE26 Tools		Tools Installed on a Power Drive	27
Used with a Power Drive	6	Tool Ratings	28
Power Drive	6	VE26S for Steel and Schedule 40 Stainless Steel Pipe and VE26P for Aluminum and PVC Pipe	28
Extension Cord Requirements	6	VE26SS for Light-Wall Stainless Steel Pipe	28
Tool Nomenclature	7	VE26C for CTS US Standard – ASTM Drawn Copper Tubing	29
Tool Setup	8	VE26AC for Australian Standard – AS 1432 Drawn Copper Tubing	29
Pipe Vise Setup	8	VE26EC for European Standard – EN 1057 Drawn Copper Tubing	29
Groove-In-Place Setup	8	Explanation of Critical Roll Groove Dimensions	30
Power Drive Mounting Plate Kit Installation	9	Roll Groove Specifications	
Power Drive Setup	10	VE26S for Steel and Schedule 40 Stainless Steel Pipe	31
Preparation for Grooving	13	VE26SS for Light-wall Stainless Steel Pipe	31
Pipe/Tubing Preparation	13	VE26P for Aluminum and PVC Pipe	31
Pipe Lengths Suitable for Grooving (Applies only to tools installed on a power drive)	14	Copper Tubing to CTS US Standard – ASTM B-88 (VE26C)	32
Short Pipe/Tubing Lengths	14	Copper Tubing to European Standard – EN 1057 (VE26EC)	32
Long Pipe/Tubing Lengths	15	Copper Tubing to Australian Standard – AS 1432 (VE26AC)	33
Groove Depth Adjustment	16	Facilities Location	34
Grooving Operation For Pipe Vise Setup or Groove-In-Place Setup	18		
Dismounting the Tool	20		
Grooving Operation For Power Drive Setup	21		
Maintenance	24		
Lubrication	24		
Parts Ordering Information	25		

HAZARD IDENTIFICATION

Definitions for identifying the various hazard levels are provided below.



This safety alert symbol indicates important safety messages. When you see this symbol, be alert to the possibility of personal injury. Carefully read and fully understand the message that follows.

DANGER

- The use of the word “DANGER” identifies an immediate hazard with a likelihood of death or serious personal injury if instructions, including recommended precautions, are not followed.

WARNING

- The use of the word “WARNING” identifies the presence of hazards or unsafe practices that could result in death or serious personal injury if instructions, including recommended precautions, are not followed.

CAUTION

- The use of the word “CAUTION” identifies possible hazards or unsafe practices that could result in personal injury and product or property damage if instructions, including recommended precautions, are not followed.

NOTICE

- The use of the word “NOTICE” identifies special instructions that are important but not related to hazards.

OPERATOR SAFETY INSTRUCTIONS

The VE26 is designed only for roll grooving pipe/tubing. Use of this tool requires dexterity and mechanical skills, as well as sound safety habits. Although this tool is manufactured for safe, dependable operation, it is impossible to anticipate all the combinations of circumstances that could result in an accident. The following instructions are recommended for safe operation of this tool. The operator is cautioned to always practice "safety first" during each phase of use, including setup and maintenance. It is the responsibility of the owner, lessee, or user of this tool to ensure that all operators read this manual and fully understand the operation of this tool.

Read this manual before operating or servicing the tool. Become familiar with the tool's operations, applications, and limitations. Be particularly aware of its specific hazards. Store this manual in a clean area where it is always readily available. Additional copies of this manual are available upon request through the Victaulic Tool Company.

GENERAL

1. This tool is designed ONLY for roll grooving pipe/tubing sizes, materials, and wall thicknesses listed in the "Tool Ratings" section, starting on page 28.

2. Inspect the equipment. Before using the tool, check all moveable parts for any obstructions. Make sure tool components are installed and adjusted properly.

3. Wear proper apparel. Do not wear loose clothing, jewelry, or anything that can become entangled in moving parts.

4. Wear protective items when working with tools. Always wear safety glasses, hardhat, and foot protection. Wear hearing protection when using power-driven tools.

5. Stay alert. Do not operate the tool if you are drowsy from medication or fatigue. Avoid horseplay around the equipment.

6. Keep visitors away from the immediate work area. All visitors should be kept a safe distance from the equipment at all times. When using the tool at elevated locations as an "In-Place" groover, the area below must remain clear of other personnel to prevent injuries in case a tool or hand crank is accidentally dropped.

7. Keep work areas clean. Keep the work area around the tool clear of any obstructions that could limit the movement of the operator. Clean up any oil or other spills.

8. Secure the pipe/tubing before performing the grooving operation. Make sure the pipe/tubing is secured or otherwise capable of handling the weight of the tool and resisting the torque created when used as an "In-Place" groover.

9. Keep hands and tools away from grooving rolls during the grooving operation. Grooving rolls can crush or cut fingers and hands.

10. Do not reach inside the pipe/tubing end during tool operation.

11. Do not force the tool. Do not force the tool or accessories to perform any functions beyond their capabilities. Do not overload the tool.

12. Do not operate the tool at speeds exceeding those specified in this manual.

13. Maintain tools with care. Keep tools clean at all times to ensure proper and safe performance. Follow the instructions for lubricating tool components.

14. When tools are not in use, store them in a dry, secure place.

15. Use only Victaulic replacement parts and accessories. Use of any other parts may result in a voided warranty, improper operation, and hazardous situations. Refer to the "Parts Ordering Information" and "Accessories" sections on page 25.

16. Do not remove any labels from the tool. Replace any damaged or worn labels.

TOOLS USED WITH A POWER DRIVE

1. VE26 tools that are intended for use with a power drive MUST have the optional power drive kit installed before attempting to groove pipe/tubing.

2. Avoid using the tool in dangerous environments. Do not expose the tool to rain, and do not use the tool in damp or wet locations. Do not use the tool on sloped or uneven surfaces. Keep the work area well lit. Allow sufficient space to operate the tool properly.

3. Ground the power drive to protect the operator from electric shock. Make sure the power drive is connected to an internally grounded electrical source.

4. Prevent accidental startups. Place the switch on the power drive to the “OFF” position before plugging the unit into the electrical source.

5. Operate the tool only with a safety foot switch. The power drive must be operated with a safety foot switch that is located for easy operator access. Never reach across moving parts. If the power drive does not contain a safety foot switch, contact the power drive manufacturer.

6. Secure the power drive. Make sure the power drive is stable.

7. Support the work. Support long pipe/tubing lengths with a pipe stand that is secured to the floor or the ground.

8. Do not over-reach. Maintain proper footing and balance at all times. Make sure the safety foot switch is easily accessible for the operator.

9. Do not abuse the safety foot switch cord. Never yank the cord out of the receptacle. Keep the cord away from heat, oil, and sharp objects.

10. Unplug the power drive from the electrical source before servicing the tool. Only authorized personnel should attempt to perform maintenance on the tool. Always disconnect the power drive from the electrical source before servicing or adjusting the tool.

INTRODUCTION

NOTICE

- Drawings and/or pictures in this manual may be exaggerated for clarity.
- The tool, along with this operating and maintenance instructions manual, contains trademarks, copyrights, and/or patented features that are the exclusive property of Victaulic Company.

The Victaulic VE26 Roll Grooving Tool series is designed for roll grooving pipe/tubing to receive Victaulic grooved pipe/tubing products and can be used for either manual or power operation.

CAUTION

- This tool must be used **ONLY** for roll grooving pipe/tubing designated in the "Tool Rating" section of this manual.

Failure to follow this instruction could overload the tool, resulting in reduced tool life and/or damage to the tool.

RECEIVING THE TOOL

VE26 tools are packed individually in sturdy containers, which are designed for use in re-shipping tools back to Victaulic upon completion of the rental contract, when applicable.


Upon receipt of the tool, make sure all necessary parts are included. If any parts are missing, notify the Victaulic Tool Company.

VE26 CONTAINER CONTENTS



Qty.	Description
1	VE26 Tool (S, SS, P, C, BC, DIN, or AC Version, as Ordered)
1	Set of Groove Depth Gauges (Attached to Tool)
1	Hand Crank
2	VE26 Operating and Maintenance Instructions Manual
1	RP-VE26 Repair Parts List

OPTIONAL POWER DRIVE KIT CONTENTS*

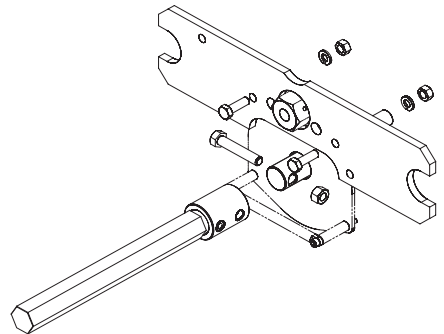


Qty.	Description
1	Power Drive Mounting Plate
1	Drive Shaft/Adapter
1	Hex-Head Bolt
1	Hex Nut with Nylon Insert
2	Hex-Head Cap Screw
2	Lock Washer
2	Hex Nut

* Kit Part Number (R-075-026-KIT)

POWER REQUIREMENTS FOR VE26 TOOLS USED WITH A POWER DRIVE

DANGER



- To reduce the risk of electric shock, check the electrical source for proper grounding.
- Before performing any maintenance on the tool, turn the switch on the power drive to the "OFF" position, or disconnect the power cord from the electrical source.

Failure to follow these instructions could result in death or serious personal injury.

POWER DRIVE

VE26 tools are designed for manual operation or operation with a power drive. For power operation, tools mount directly onto a Victaulic VPD752 Power Drive or a Ridgid® 300 Power Drive with a 38-rpm maximum chuck speed.

Power must be supplied to the power drive through a safety foot switch to ensure safe operation. Make sure the power drive is properly grounded in accordance with Article 250 of the National Electrical Code.

If an extension cord is required, refer to the "Extension Cord Requirements" section on this page for cord sizes. In addition, refer to the power drive manufacturer's instructions prior to use.

EXTENSION CORD REQUIREMENTS

When pre-wired outlets are not available and an extension cord must be used, it is important to use the proper cord size (i.e. Conductor Size American Wire Gauge). Cord size selection is based upon tool rating (amps) and cord length (feet). Use of a cord size (gauge) thinner than required will cause significant voltage drop at the power drive while the tool is operating. Voltage drops may cause damage to the power drive and can result in improper tool operation. **NOTE:** It is acceptable to use a cord size (gauge) that is heavier than required.

The required cord sizes (gauges) for cord lengths up to and including 100 feet (31 m) are listed in the table below. Use of extension cords longer than 100 feet (31 m) must be avoided.


Power Drive Rating Volts (Amps)	Cord Lengths		
	25 feet (8 m)	50 feet (15 m)	100 feet (31 m)
115 (15)	12 gauge	12 gauge	10 gauge

®Ridgid is a registered trademark of The Ridge Tool Company.


TOOL NOMENCLATURE

NOTICE

- Drawings and/or pictures in this manual may be exaggerated for clarity.
- The tool, along with this operating and maintenance instructions manual, contains trademarks, copyrights, and/or patented features that are the exclusive property of Victaulic Company.

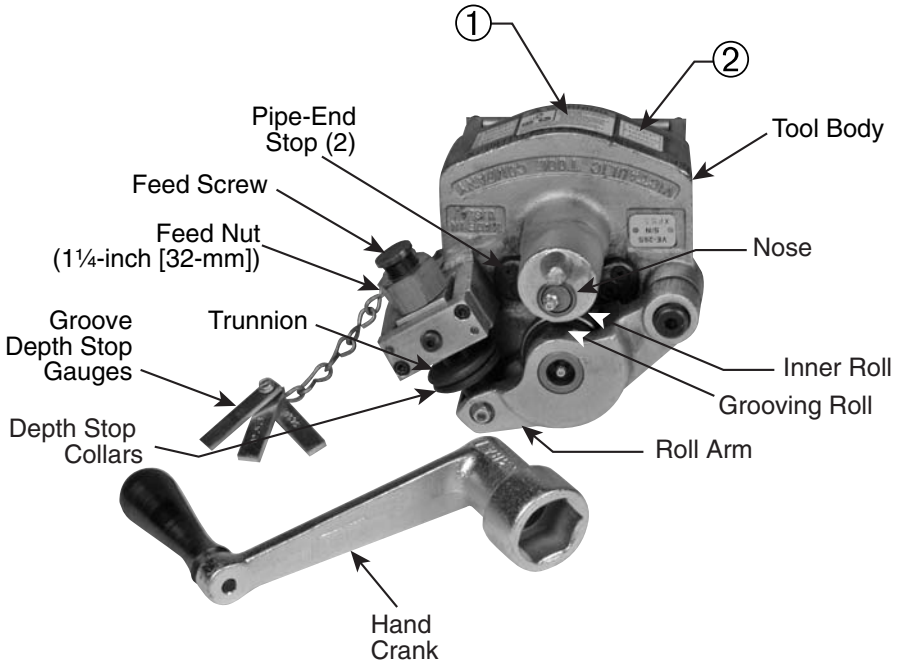

OPPOSITE SIDE OF TOOL

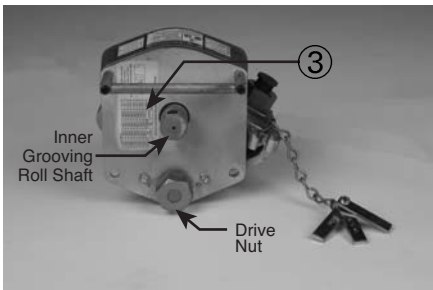

① Warning Label (Varies depending upon which tool configuration is ordered)

③ Groove Diameter "C" Dimension Label (Varies depending upon which tool configuration is ordered)

TOOL SETUP

VE26 tools can be used to groove pipe/tubing that is supported by several different methods. Refer to the setup instructions listed in this section for different grooving options.

PIPE VISE SETUP

1. When grooving pipe/tubing that is supported with a pipe vise, select a location for the tool and pipe vise by taking into consideration the following factors:

- 1a.** Adequate space to handle pipe/tubing lengths
 - 1b.** A firm and level surface for the pipe vise
 - 1c.** Anchoring requirements for the pipe vise
- 2.** Mount a chain-type pipe vise onto a stand or workbench. The pipe vise should be mounted flush with or slightly overhang the edge of the stand or workbench. When the tool is mounted on the pipe/tubing, the tool must be able to rotate freely around the pipe/tubing without being obstructed by the stand or workbench.



3. Secure a length of pipe/tubing in the pipe vise. Pipe/tubing position and pipe vise anchoring must be capable of handling the weight of the tool (tool weighs approximately 22 pounds [10 kilograms]), plus the manual effort required to operate the tool (approximately 20 ft-lbs [27 N•m] of torque). Position the pipe/tubing to overhang the pipe vise approximately 5 – 12 inches (125 – 300 mm), as shown, so that the tool can rotate freely.

GROOVE-IN-PLACE SETUP



! WARNING



- Depressurize and drain the piping system before attempting to disassemble any Vic-taulic piping products.
- Pipe hangers must be capable of handling the weight of the tool and the manual effort required to operate the tool.


Failure to follow these instructions could result in serious personal injury and/or property damage.

Previously installed pipe/tubing may be grooved with a VE26 tool, provided the pipe/tubing is supported securely and that the system is completely depressurized and drained. Pipe hangers must be capable of handling the weight of the tool (tool weighs approximately 22 pounds [10 kilograms]), plus the manual effort required to operate the tool (approximately 20 ft-lbs [27 N•m]).

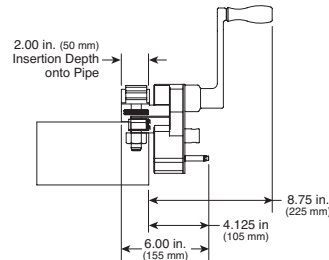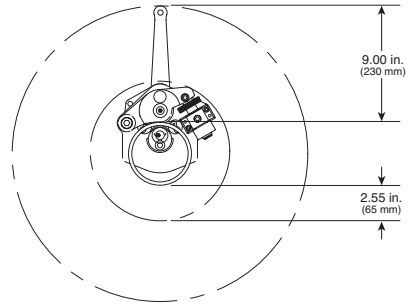


Make sure there is adequate clearance around the pipe/tubing to permit proper tool rotation during the grooving process. Refer to the drawings above for dimensions.

POWER DRIVE MOUNTING PLATE KIT INSTALLATION

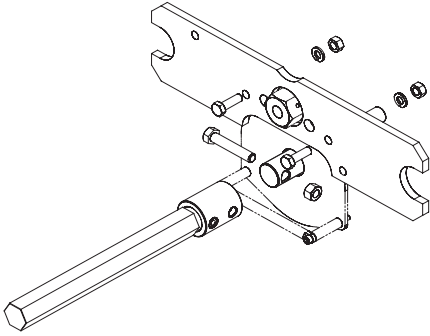


1. Install the drive shaft/drive-adapter assembly onto the end of the lower shaft, as shown above. **NOTE:** Make sure the holes in the drive shaft/drive-adapter assembly align with the holes in the inner grooving roll shaft.

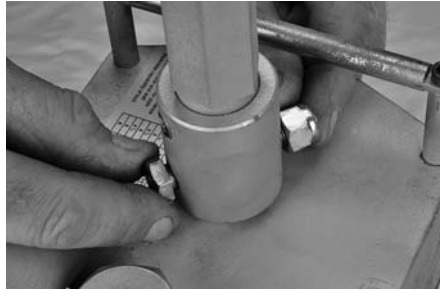

2. Insert the hex-head bolt through the holes in drive shaft/drive-adapter assembly and inner grooving roll shaft. Thread the hex nut with nylon insert onto the end of the hex-head bolt, as shown above.



3. Tighten the hex nut with nylon insert to secure the drive shaft/drive-adapter assembly to the inner grooving roll shaft.

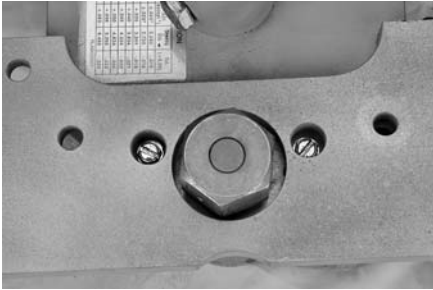

4. Install the power drive mounting plate onto the tool by placing the hole in the mounting plate over the drive nut. The two screws in the tool must align with the two holes in the mounting plate, as shown above.



5. Insert a hex-head cap screw into a hole in the mounting plate and tool body. Install a lock washer onto the end of the hex-head cap screw, and thread a hex nut onto the end of the hex-head cap screw. Repeat this procedure with the other hole in the mounting plate and tool body.

5a. Tighten the two hex nuts to secure the mounting plate to the tool body.

POWER DRIVE SETUP

WARNING


- **DO NOT** plug the power drive into the electrical source until instructed otherwise. Accidental startup of the tool could result in serious personal injury.

The VE26 tool is intended for field or shop set-up and can be attached to a Victaulic VPD752 Power Drive or a Ridgid 300 Power Drive with a 38-rpm maximum chuck speed. The power drive kit, which includes a special power drive mounting plate and hardware, must be ordered from the Victaulic Tool Company.

1. Remove all components from the packaging, and make sure all necessary items are included. Refer to the "Receiving the Tool" section on page 5.

2. Select a location for the power drive, tool, and pipe stand by taking into consideration the following factors (refer to the drawing below for overall dimensions):

- 2a.** The required power supply (Refer to the power drive manufacturer's instructions)
- 2b.** Adequate space to handle pipe/tubing lengths
- 2c.** A firm and level surface for the power drive, tool, and pipe stand
- 2d.** Adequate clearance around the tool for adjustment and maintenance

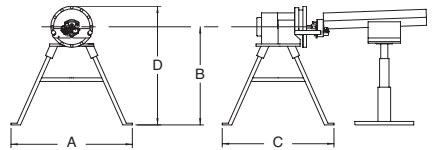

Dimensions – inches (millimeters)			
A	B	C	D
45.00 (1143,0)	37.00 (939,8)	41.00 (1041,4)	43.00 (1092,2)



3. Make sure the hardware is tightened to secure the power drive to the power drive stand.

NOTICE

- The cutoff attachments, threading dies, and reamer station do not need to be removed from the power drive. Refer to the photo shown below.



VE26 Pipe/Tubing Roll Grooving Tool



- 4.** Extend the two tubular support arms to their full extension beyond the chuck of the power drive.
- 4a.** Secure the two tubular support arms in position. Refer to the power drive manufacturer's instructions.



- 5.** Open the chuck of the power drive fully. Refer to the power drive manufacturer's instructions.
- 6.** Refer to the "Preparation for Grooving" section, starting on page 13, to install the power drive mounting plate onto the VE26 tool.



7. Orient the VE26 tool so that the roll arm is located in the 6 o'clock position. Align the flat portions of the drive shaft with the chuck jaws by turning the drive shaft. Install the tool assembly onto the power drive by inserting the drive shaft into the chuck and engaging the forks of the mounting plate with the tubular support arms of the power drive, as shown above. **NOTE:** The forks of the mounting plate should be approximately 4 inches (100 mm) back from the ends of the tubular support arms, as shown above.



8. Tighten the chuck. Make sure the chuck jaws engage with the flats of the drive shaft.

⚠ DANGER



- To reduce the risk of electric shock, check the electrical source for proper grounding and follow all instructions.
- Before performing any maintenance on the tool, turn the switch on the power drive to the "OFF" position, or disconnect the power cord from the electrical source.

Failure to follow these instructions could result in death or serious personal injury.



9. Make sure the switch on the power drive is in the "OFF" position. Plug the power drive into an internally grounded electrical outlet. The outlet must meet the requirements for the power drive (refer to the power drive manufacturer's instructions). If an extension cord is used, refer to the "Extension Cord Requirements" section, starting on page 6, for requirements.

WARNING

- The power drive **MUST** be operated with a safety foot switch. If the power drive does not contain a safety foot switch, contact the power drive manufacturer.

Operating the tool without a safety foot switch could result in serious personal injury.



10. Turn the power drive switch to the position that will produce **CLOCKWISE** rotation of the chuck when viewed from the front of the tool. On the Victaulic VPD752 or Ridgid 300 Power Drive, placing the switch in the **REVERSE** position will produce **clockwise** rotation of the chuck, lower roll, and pipe/tubing.

11. Depress the safety foot switch, check the rotation of the chuck and lower roll, and make sure the tool is stable. If rotation is **counterclockwise**, place the switch on the power drive to the opposite position. If the tool wobbles, make sure the tool is mounted squarely in the chuck and that the tool is level on the floor. If the wobble persists, the power drive support arms are bent or the power drive is damaged. Have the power drive repaired if the wobble persists.

PREPARATION FOR GROOVING

The VE26 tool design eliminates the need for roll changes. However, before attempting to operate the tool, make sure the correct tool is used for the pipe/tubing size and material being grooved. Refer to the "Tool Ratings" section on page 28 for details.

PIPE/TUBING PREPARATION

For proper tool operation and production of grooves that are within Victaulic specifications, the following guidelines must be followed.

- 1.** Victaulic recommends square-cut pipe/tubing for use with grooved-end pipe/tubing products. Square-cut pipe/tubing **MUST** be used with Victaulic FlushSeal® gaskets. Beveled-end pipe/tubing may be used, provided that the wall thickness is standard wall (ANSI B36.10) or less and that the bevel meets ANSI B16.25 (37 $\frac{1}{2}$ °) or ASTM A-53 (30°). **NOTE:** Roll grooving beveled-end pipe/tubing may result in unacceptable flare.
- 2.** Raised internal and external weld beads and seams must be ground flush with the pipe/tubing surface 2 inches (50 mm) back from the pipe/tubing ends.
- 3.** All coarse scale, dirt, and other foreign material must be removed from the interior and exterior surfaces of the pipe/tubing ends.

CAUTION

- For maximum grooving roll life, remove foreign material and loose rust from the interior and exterior surfaces of the pipe/tubing ends. Rust is an abrasive material that will wear the surface of grooving rolls.

Foreign material may interfere with or damage grooving rolls, resulting in distorted grooves and grooves that are out of Victaulic specifications.

PIPE LENGTHS SUITABLE FOR GROOVING

(Applies only to tools installed on a power drive)

The VE26 roll grooving tool installed on a power drive is capable of grooving short pipe/tubing lengths without the use of a pipe stand. Refer to the "Short Pipe/Tubing Lengths" section on this page.

Pipe/tubing lengths longer than those listed in Table 1 on the following page (and up to 20 feet/6 meters) must be supported with a pipe stand.

Pipe/tubing lengths from 20 feet (6 meters) up to double-random lengths (approximately 40 feet/12 meters) must be supported with two pipe stands.

SHORT PIPE/TUBING LENGTHS


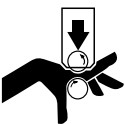
 WARNING	
	<p>Grooving rolls can crush or cut fingers and hands.</p> <ul style="list-style-type: none"> Never groove pipe that is shorter than the recommended lengths listed in this manual.

Table 1 shows the minimum and maximum pipe/tubing lengths that can be grooved without the use of a pipe stand. Refer to the "Grooving Operation For Power Drive Setup" section, starting on page 21, for instructions on how to groove short pipe/tubing lengths. For pipe/tubing longer than what is shown in Table 1, refer to the "Long Pipe/Tubing Lengths" section on page 15.

NOTICE
<ul style="list-style-type: none"> Grooved pipe/tubing nipples, shorter than those listed in the following tables, are available from Victaulic.

TABLE 1 – PIPE LENGTHS SUITABLE FOR GROOVING

Steel, Stainless Steel, Aluminum, and PVC Pipe		CTS US Standard ASTM B-88 Copper Tubing Size	Length – inches (mm)	
			Min.	Max.
Nominal Size inches	Actual Outside Dia. inches (mm)	Nominal inches (Actual mm)		
2	2.375 60,3	2 54,0	8 205	36 915
2½	2.875 73,0	2½ 66,7	8 205	36 915
3	3.500 88,9	3 79,4	8 205	36 915
4	4.500 114,3	4 104,8	8 205	36 915
5	5.563 141,3	5 130,2	8 205	32 815
6	6.625 168,3	6 155,6	10 255	28 715

Nominal Size Millimeters		Length - millimeters	
European Standard Copper Tubing Size	Australian Standard Copper Tubing Size	Minimum	Maximum
54	DN 50	205	915
64	DN 65	205	915
66,7		205	915
76,1	DN 80	205	915
88,9		205	915
108	DN 100	205	915
133	DN 125	205	815
159	DN 150	255	715

If pipe/tubing is required that is shorter than the minimum lengths listed in the above table, shorten the next-to-last piece so that the last piece is as long (or longer) than the minimum length specified. Refer to the example on the following page.

EXAMPLE: A 20-foot, 4-inch (6,2-m) length of 6-inch diameter steel pipe is required to finish a section, and only 20-foot (6,1-m) lengths are available. Instead of roll grooving a 20-foot (6,1-m) length of steel pipe and a 4-inch (0,1-m) length of steel pipe, follow these steps:

1. Refer to Table 1 and note that for 6-inch diameter steel pipe, the minimum length that should be roll grooved is 10 inches (255 mm).
2. Roll groove a 10-foot, 6-inch (3,2-m) length of steel pipe and a 10-inch (255-mm) length of steel pipe. Refer to the "Long Pipe/Tubing Lengths" section on this page.

LONG PIPE/TUBING LENGTHS

When roll grooving pipe/tubing that exceeds the maximum length shown in Table 1, a roller-type pipe stand must be used. The roller-type pipe stand must be capable of handling the weight of the pipe/tubing, while allowing the pipe/tubing to rotate freely.

- a. Make sure the power drive and pipe stand are located on a firm and level surface.

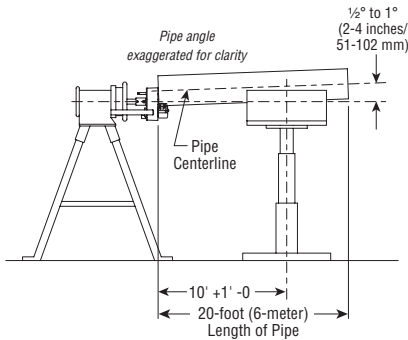


Figure 1 - Support of Pipe

- b. Place the pipe stand at a distance slightly beyond half the pipe/tubing length from the tool. Refer to Figure 1 above.

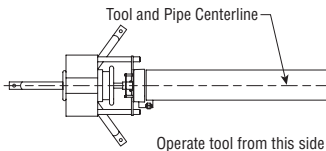


Figure 2 - Tracking Angle

- c. Position the centerline of the pipe stand along the centerline of the tool. Refer to Figure 2 above.

NOTICE

- Pipe must be positioned ABOVE level when using VE26 and VE46 roll grooving tools with a power drive.
- All other Victaulic roll grooving tools require pipe positioning that is below level.

- d. Adjust the height of the pipe stand so that the pipe is approximately $1/2^\circ$ to 1° ABOVE level. Refer to Figure 1. **NOTE:** The pipe/tubing must be inserted into the rolls while the height of the pipe stand is adjusted.

CAUTION

- Make sure the pipe stand is positioned properly to prevent flaring of the pipe/tubing end.
- Always refer to the applicable "Roll Groove Specifications" table for details.

Installation of couplings on pipe/tubing that exceeds the maximum allowable flare may prevent pad-to-pad closure of the housings and/or may cause damage to the coupling gasket, resulting in property damage.

NOTICE

- Figure 1 shows the Victaulic Adjustable Pipe Stand (VAPS 112). The VAPS 112 is suitable for $3/4$ - 12-inch sizes. The Victaulic Model VAPS 224 is suitable for 2 - 24-inch sizes. Refer to the "Accessories" section on page 25
- For additional information about pipe stands, refer to the instructions included with the pipe stand.

GROOVE DEPTH ADJUSTMENT

The depth stop collars must be adjusted for each pipe/tubing size or change in wall thickness. The groove diameter, which is identified as the "C" dimension, is listed under the "Roll Groove Specifications" section, starting on page 31. In addition, a label is affixed to the tool, which lists the "C" dimensions for the pipe/tubing sizes.

NOTICE


- To perform the following adjustments, use several short scrap sections of pipe/tubing that is the proper material, diameter, and thickness to be grooved. Make sure the scrap sections meet the length requirements listed in Table 1 on page 14.




1. Unlock and separate the depth stop collars by turning them in opposite directions.



2. Clamp the pipe/tubing in the tool by turning the feed nut clockwise. Continue to turn the feed nut clockwise until the grooving rolls make firm contact with the pipe/tubing.

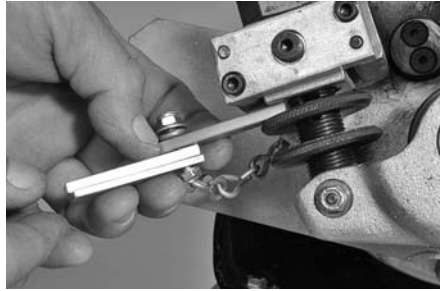

3. Remove the groove depth gauges from the clip on the tool. The groove depth gauges are identified with the pipe/tubing size. Select the correct groove depth gauge, and place it between the depth stop collar and trunnion, as shown above.

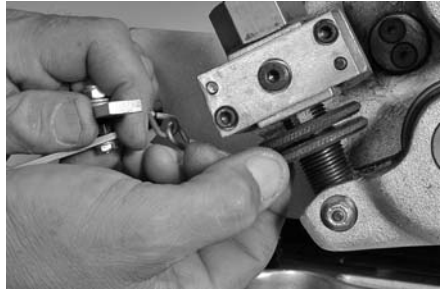

4. Using the groove depth gauge like a feeler gauge, turn the depth stop collar until it contacts the groove depth gauge firmly against the top of the trunnion. Turn the second collar until it is locked firmly against the depth stop collar. Locking the two collars will maintain the gap set with the groove depth gauge.

4a. Remove the groove depth gauge from between the collar and trunnion. Place the groove depth gauges back into the clip provided on the tool.

5. Prepare a trial groove. Refer to the applicable "Grooving Operation" section, starting on page 18 or 21.



6. After a trial groove is prepared and the pipe/tubing is removed from the tool, carefully check the groove diameter ("C" dimension). Refer to the "Roll Groove Specifications" section, starting on page 31. The PT-100 Pipe Tape, supplied with the tool, is the best method for checking the "C" dimension. In addition, a vernier caliper or narrow-land micrometer can be used to check this dimension at two locations (90° apart) around the groove. The average reading must be within the required groove diameter specification.

! CAUTION

- The "C" dimension (groove diameter) must conform to Victaulic specifications to ensure proper joint performance.

Failure to follow this instruction could cause joint failure, resulting in personal injury and/or property damage.

7. If the groove diameter ("C" dimension) is not within Victaulic specifications, the depth stop collars must be adjusted.

7a. To adjust for a smaller groove diameter, turn the depth stop collars away from the trunnion.

7b. To adjust for a larger groove diameter, turn the depth stop collars toward the trunnion.

NOTE: A quarter-turn either way will change the groove diameter approximately 0.016 inch (0,4 mm) or 0.064 inch (1,6 mm) per full turn.

8. Prepare another trial groove, and check the groove diameter ("C" dimension), as described in steps 5 - 6 on this page. Repeat these steps, as necessary, until the groove diameter is within specification.

GROOVING OPERATION

For Pipe Vise Setup or Groove-In-Place Setup

CAUTION

- This tool must be used **ONLY** for roll grooving pipe/tubing designated in the "Tool Ratings" section of this manual.

Failure to follow this instruction could overload the tool, resulting in reduced tool life and/or damage to the tool.

1. Make sure the proper tool is selected for the pipe/tubing to be grooved. Refer to the "Tool Ratings" section on page 28 for details.
2. Before grooving, make sure all applicable instructions in the previous sections of this manual have been followed.



3. Retract the roll arm fully by turning the feed nut **counterclockwise**.



4. With the drive nut toward the bottom (down position), insert the nose of the tool body into the pipe/tubing end. Push the tool onto the pipe/tubing until the pipe/tubing end contacts the two pipe-end stops.



5. Draw the rolls together by turning the feed nut **clockwise**. Continue to turn the feed nut **clockwise** until the grooving rolls make firm contact with the pipe/tubing.

CAUTION

- **DO NOT** exceed the feed rates listed in this section.
- **Over-tightening (over-feeding)** will result in shortened bearing life and other tool damage.

Failure to follow these instructions could cause personal injury and/or tool damage.


6. Set the groove depth by referring to the "Groove Depth Adjustment" section, starting on page 16.



7. Advance the grooving roll by turning the feed nut **clockwise**. Refer to the "VE26 Feed Rates" table on page 19. **NOTE:** Feed rates for VE26 tools vary depending upon the pipe/tubing material and wall thickness. **DO NOT** exceed the feed rates listed in this table.


VE26 Feed Rates

Tools	Pipe Material	Wall Thickness inches (mm)	Recommended Amount of Turns of Feed Nut to Advance the Grooving Roll
VE26S VE26SS	Steel and Stainless Steel	0.135 – 0.216 3,4 – 5,5	1/4 Turn
		0.120 – 0.134 1,7 – 3,0	1/3 Turn
		0.065 – 0.119 1,7 – 3,0	1/2 Turn
VE26P	Aluminum	0.135 – 0.216 3,4 – 5,5	1/3 Turn
		0.120 – 0.134 3,1 – 3,4	1/2 Turn
		0.065 – 0.119 1,7 – 3,0	2/3 Turn
VE26P	PVC Plastic	0.154 – 0.258 3,9 – 6,6	3/4 Turn
VE26C VE26EC VE26AC	Copper	0.126 – 0.192 3,2 – 4,9	1/2 Turn
		0.073 – 0.125 1,9 – 3,2	2/3 Turn
		0.042 – 0.072 1,1 – 1,8	3/4 Turn

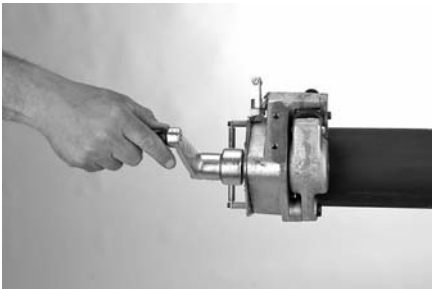


8. Place the hand crank onto the drive nut. Crank the drive nut either clockwise or counterclockwise until the tool travels one full turn around the pipe/tubing.

NOTE: A ratchet with a 1 1/4-inch (32-mm) socket (not supplied) may be used in place of the hand crank to operate the VE26 tool in low clearance conditions.

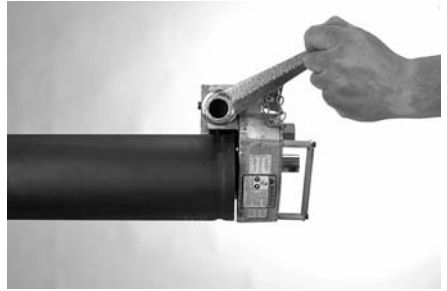


9. Advance the grooving roll by turning the feed nut **clockwise**. Refer to the table on this page for the recommended amount of turns of the feed nut.

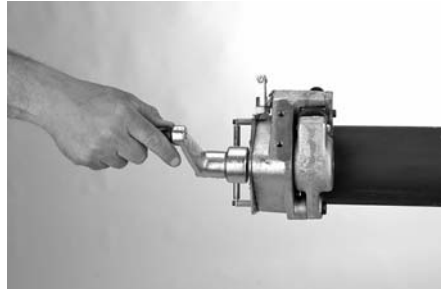

10. Crank the tool another full turn around the pipe/tubing.



11. Continue grooving by advancing the feed and by cranking the tool around the pipe/tubing until the depth stop collar contacts the trunnion. At this point, the grooving roll cannot be advanced any further.

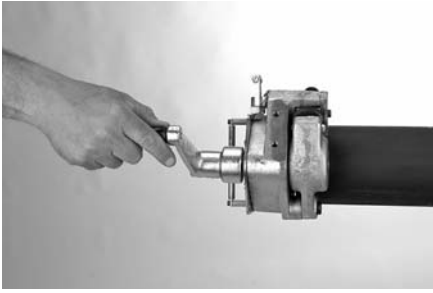


12 Crank the tool one to three additional full turns around the pipe/tubing to ensure groove completion.

DISMOUNTING THE TOOL

CAUTION

- Always support the tool while retracting the grooving roll. Retracting the grooving roll loosens the tool from the pipe/tubing.

Failure to follow these instructions could cause the tool to fall, resulting in personal injury and/or tool damage.

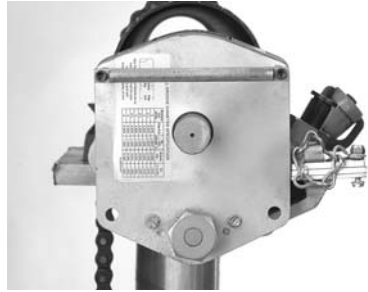

1. Crank the tool until the drive nut is located in the down position.



2 While supporting the tool, retract the grooving roll and arm to the fully open position by turning the feed nut **counterclockwise**.

3. Remove the tool from the pipe/tubing.

NOTICE

- The groove diameter must be within specification for the diameter and wall thickness of pipe/tubing. The groove diameter should be checked and adjusted, as necessary, to ensure grooves remain within specification. Refer to steps 5 – 6 of the “Groove Depth Adjustment” section on page 17.

GROOVING OPERATION

For Power Drive Setup

⚠ CAUTION

- This tool must be used **ONLY** for roll grooving pipe/tubing designated in the "Tool Ratings" section of this manual.

Failure to follow this instruction could overload the tool, resulting in reduced tool life and/or damage to the tool.

⚠ DANGER



- To reduce the risk of electric shock, check the electrical source for proper grounding and follow all instructions.
- Before operating the tool, review the "Operator Safety Instructions" section on page 3 of this manual.

Failure to follow these instructions could result in death or serious personal injury.

1. Make sure the proper tool is selected for the pipe/tubing to be grooved. Refer to the "Tool Ratings" section on page 28 for details.
2. Before grooving, make sure all applicable instructions in the previous sections of this manual have been followed.
3. Plug the power drive into an internally grounded electrical source. **NOTE:** The power drive **MUST** be grounded. Refer to the power drive manufacturer's instructions for detailed information.



4. Set the power drive switch to produce **CLOCKWISE** rotation of the VE26 inner roll and pipe/tubing when viewed from the front of the tool. On the Victaulic VPD752 Power Drive or the Ridgid 300 Power Drive, place the

VE26 Pipe/Tubing Roll Grooving Tool

switch in the **REVERSE** position to produce **clockwise** rotation of the inner roll and pipe/tubing.


⚠ WARNING

- The power drive **MUST** be operated with a safety foot switch. If the power drive does not contain a safety foot switch, contact the power drive manufacturer.

Operating the tool without a safety foot switch could result in serious personal injury.


5. Make sure the tool is operational by depressing the safety foot-switch pedal. The inner roll must turn **CLOCKWISE** when viewed from the front of the tool. Remove foot from the safety foot switch.

⚠ WARNING

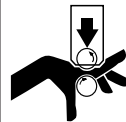


Grooving rolls can crush or cut fingers and hands.

- Before making any tool adjustments, always turn the switch on the power drive to the "OFF" position, or disconnect the power cord from the electrical source.
- Loading and unloading pipe/tubing will place your hands close to the rollers. Keep hands away from the grooving rolls during operation.
- Never reach inside pipe/tubing end or across the tool or pipe/tubing during operation.
- Always groove pipe/tubing in a **CLOCKWISE** direction only.
- Never groove pipe/tubing that is shorter than the recommended lengths listed in this manual.
- Never wear loose clothing, loose gloves, or anything else that can become entangled in moving parts.

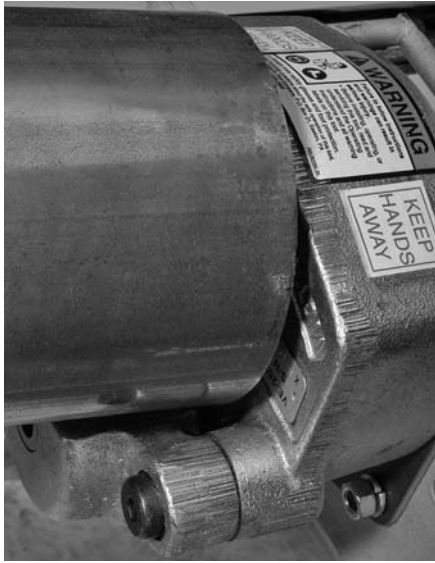

6. Insert a length of pipe/tubing that is the correct size and thickness onto the lower roll. Make sure the pipe/tubing end contacts the two pipe-end stops completely.

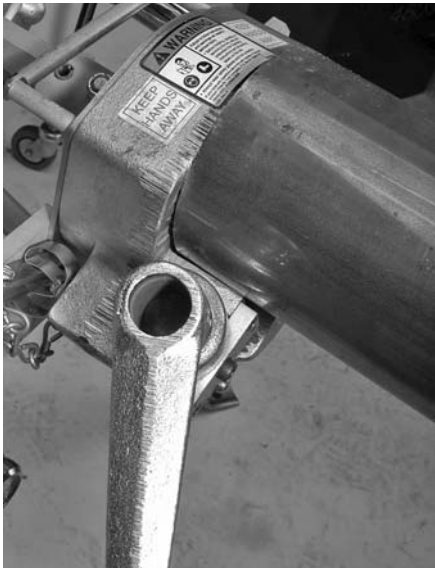


7. Draw the rolls together by turning the feed nut **clockwise**. Continue to turn the feed nut **clockwise** until the grooving rolls make firm contact with the pipe/tubing.

7a. Remove hands from the pipe/tubing.

CAUTION

- **DO NOT** exceed the feed rates listed in this section.
- **Over-tightening (over-feeding)** will result in shortened bearing life and other tool damage.
- **Over-tightening and under-tightening** could result in the tool “walking” off the pipe/tubing.

Failure to follow these instructions could cause personal injury and/or tool damage.

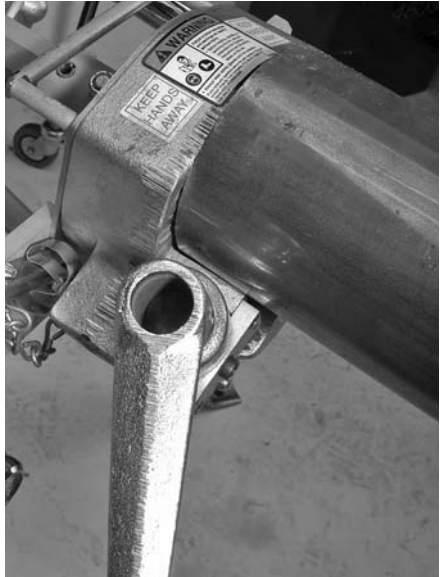


8. Advance the grooving roll by turning the feed nut **clockwise**. Refer to the “VE26 Feed Rates” table on page 23. **NOTE:** Feed rates for VE26 tools vary depending upon the pipe/tubing material and wall thickness. **DO NOT** exceed the feed rates listed in this table.

VE26 Feed Rates

Tools	Pipe Material	Wall Thickness inches (mm)	Recommended Amount of Turns of Feed Nut to Advance the Grooving Roll
VE26S VE26SS	Steel and Stainless Steel	0.135 – 0.216 3,4 – 5,5	1/4 Turn
		0.120 – 0.134 1,7 – 3,0	1/3 Turn
		0.065 – 0.119 1,7 – 3,0	1/2 Turn
VE26P	Aluminum	0.135 – 0.216 3,4 – 5,5	1/3 Turn
		0.120 – 0.134 3,1 – 3,4	1/2 Turn
		0.065 – 0.119 1,7 – 3,0	2/3 Turn
VE26P	PVC Plastic	0.154 – 0.258 3,9 – 6,6	3/4 Turn
VE26C VE26EC VE26AC	Copper	0.126 – 0.192 3,2 – 4,9	1/2 Turn
		0.073 – 0.125 1,9 – 3,2	2/3 Turn
		0.042 – 0.072 1,1 – 1,8	3/4 Turn

9. Set the groove depth by referring to the "Groove Depth Adjustment" section, starting on page 16.

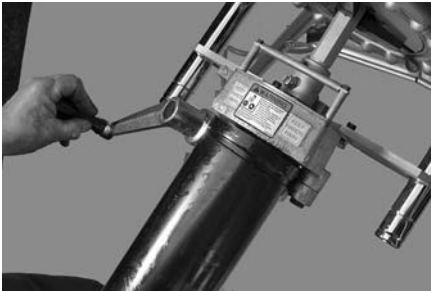

10. Depress and hold down the safety foot-switch pedal. The pipe/tubing will begin to rotate **clockwise**. As the pipe/tubing rotates, begin the grooving process. Using the hand crank supplied with the tool, advance the grooving roll by turning the feed nut **clockwise**. Refer to the table above for the recommended amount of turns of the feed nut.

NOTE: A ratchet with a 1 1/4-inch (32-mm) socket (not supplied) may be used in place of the hand crank.



11. Continue grooving by turning the feed nut to advance the grooving roll until the depth stop collar contacts the trunnion. At this point, the feed nut cannot be advanced any further.

12. Continue pipe/tubing rotation for one to three additional revolutions to ensure groove completion.

13. Release the safety foot-switch pedal, and withdraw foot from the safety foot switch.


WARNING

- **DO NOT** place hands inside the pipe/tubing end or in the area of the grooving rolls while the pipe/tubing is still rotating.

Failure to follow this instruction could result in serious personal injury.



14. If a short length of pipe/tubing is in the tool, manually support the pipe/tubing.

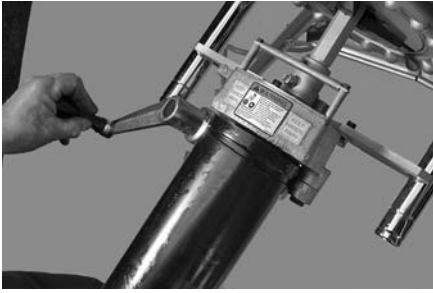

15. To release the pipe/tubing, turn the feed nut **counterclockwise** to retract the roll arm to the fully open position. Slide the pipe/tubing out of the tool.

NOTICE

- The groove diameter must be within specification for the diameter and wall thickness of pipe/tubing. The groove diameter should be checked and adjusted, as necessary, to ensure grooves remain within specification.

MAINTENANCE

⚠ DANGER




- Before performing any maintenance on a tool installed on a power drive, turn the switch on the power drive to the "OFF" position, or disconnect the power cord from the electrical source.

Failure to follow this instruction could result in death or serious personal injury.

This section provides information about keeping tools in proper operating condition and guidance for making repairs when it becomes necessary. Preventive maintenance during operation will pay for itself in repair and operating savings.

Replacement parts must be ordered from Victaulic Tool Company to ensure proper and safe operation of the tool.

LUBRICATION

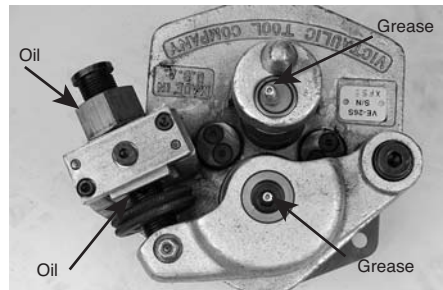

- 1.** After every 8 hours of operation, grease the bearings at the two grease fittings on the tool with a No. 2EP lithium-base grease.
- 2.** On a weekly basis, apply a light oil (SAE 10W-30 or equivalent) to the threads where the feed screw passes through the feed nut. Apply oil to the feed screw and trunnion pivots.

PARTS ORDERING INFORMATION

When ordering parts, the following information is required for the Victaulic Tool Company to process the order and send the correct part(s). Request the RP-26 Repair Parts List for detailed drawings and parts listings.

1. Tool Model Number – VE26
2. Tool Serial Number – The serial number is stamped onto the tool body
3. Quantity, Part Number, and Description – For example, (1), R0100260FS, Feed Screw
4. Where to Send the Part(s) – Company name and address
5. To Whose Attention to Send the Part(s)
6. Purchase Order Number

Order parts from the Victaulic Tool Company at the address listed in this manual.

ACCESSORIES

VAPS 112 VICTAULIC ADJUSTABLE PIPE STAND



The Victaulic VAPS 112 is a portable, adjustable, roller-type pipe stand that contains four legs for additional stability. Ball transfer rollers, adjustable for $\frac{3}{4}$ - 12-inch pipe, accommodate linear and rotational movement. The turnstile design permits ease of grooving for both pipe ends. Contact Victaulic Tool Company for details.

VE26 Pipe/Tubing Roll Grooving Tool

VAPS 224 VICTAULIC ADJUSTABLE PIPE STAND



The Victaulic VAPS 224 contains features that are similar to the VAPS 112, but it is suitable for 2 - 24-inch pipe sizes. Contact the Victaulic Tool Company for details.

VPD752 POWER DRIVE



The Victaulic VPD752 Power Drive can be used as the power drive unit for several different roll grooving tool models with the correct base plate. The power drive utilizes a 60 Hz universal motor and requires 115V/1 Phase, 15 amps of power. A safety foot switch is included for proper operation. Contact the Victaulic Tool Company for details.

TROUBLESHOOTING

GENERAL AND "IN-PLACE" GROOVING

Problem	Possible Cause	Solution
Unable to close rolls on pipe/tubing.	Improper adjustment of the depth stop collars.	Turn the depth stop collars away from the trunnion, and reset the depth stop collar. Refer to the "Groove Depth Adjustment" section on page 16.
Tool does not move when cranked.	Rust or dirt buildup is present on the roll set. Worn roll set.	Remove rust or dirt buildup from the roll set with a stiff wire brush. Inspect the roll set for worn knurls. Replace the roll set if excessive wear is present.
Tool wobbles during cranking.	Variation in pipe/tubing wall thickness or inadequate feed rate.	Advance the feed at the rate specified in the "Grooving Operation" section.
Tool will not track (tool "walks" or falls off pipe/tubing).	Tool is not correctly positioned on the pipe/tubing. Pipe/tubing end is not cut square. Excessive fall-off at the tubing end from using a tubing cutter. Improper feed rate.	Re-position the tool is the pipe/tubing against the two pipe-end stops. Cut the pipe/tubing square. Refer to the "Pipe/Tubing Preparation" section on page 13. Remove fall-off (burr). Advance the feed at the rate specified in the "Grooving Operation" section.
The tool will not groove the pipe/ tubing.	Pipe/tubing is beyond the wall thickness capacity of the tool. Pipe/tubing material is excessively hard.	Refer to the "Tool Ratings" section on page 28. Refer to the "Tool Ratings" section on page 28.
Pipe/tubing grooves do not meet Victaulic specifications.	Depth stop collars are not adjusted correctly. Pipe/tubing is beyond the wall thickness capacity of the tool.	Refer to the "Groove Depth Adjustment" section on page 16. Refer to the "Tool Ratings" section on page 28.
Groove is too deep (groove diameter is too small).	Improper adjustment of the depth stop collars.	Reset the depth stop collars by referring to the "Groove Depth Adjustment" section on page 16.
Groove is too shallow (groove diameter too large).	Improper adjustment of the depth stop collars.	Reset the depth stop collars by referring to the "Groove Depth Adjustment" section on page 16.
The "A" Gasket Seat or "B" Groove Width dimensions do not meet Victaulic specifications.	Incorrect tool was selected for the pipe/tubing material.	Select the correct tool by referring to the "Tool Ratings" section on page 28.

TOOLS INSTALLED ON A POWER DRIVE

Problem	Possible Cause	Solution
Pipe/tubing will not stay in the grooving rolls.	<p>Incorrect pipe/tubing positioning of long pipe/tubing length.</p> <p>Roll set and pipe/tubing are not rotating clockwise.</p>	<p>Refer to the "Long Pipe/Tubing Lengths" section on page 15.</p> <p>Flip the switch on the power drive to the opposite rotation position.</p>
Pipe/tubing stops rotating during grooving.	<p>Rust or dirt buildup is present on the roll set.</p> <p>Rust or dirt is excessively heavy inside the pipe/tubing end.</p> <p>Worn roll set.</p> <p>Power drive has stalled due to over-advancing the grooving roll.</p> <p>The circuit breaker has tripped or a fuse has blown out on the electrical circuit that supplies the power drive.</p>	<p>Remove rust or dirt accumulation from the roll set with a stiff wire brush.</p> <p>Remove heavy rust and dirt from inside the pipe/tubing end.</p> <p>Inspect the roll set for worn knurls. Replace the roll set if excessive wear is present.</p> <p>Make sure the pipe/tubing is supported. Release the pipe/tubing by turning the feed nut counterclockwise, which will retract the roll arm and grooving roll to the fully open position. Refer to the "Grooving Operation For Power Drive Setup" section on page 21 to start the grooving process again.</p> <p>Reset the breaker, or replace the fuse.</p>
While grooving, loud squeaks echo through the pipe/tubing.	<p>Incorrect pipe/tubing support positioning on long pipe/tubing. Pipe/tubing is "over-tracking."</p> <p>Pipe/tubing is not cut square.</p> <p>Pipe/tubing is rubbing excessively on the two pipe-end stops.</p>	<p>Re-position the pipe/tubing support. Refer to the "Long Pipe/Tubing Lengths" section on page 15.</p> <p>Cut the pipe/tubing end squarely.</p> <p>Remove the pipe/tubing from the tool, and apply a light coating of grease to the two pipe-end stops, as needed.</p>
During grooving, loud thumps or bangs occur approximately once every revolution of the pipe/tubing.	<p>Pipe/tubing has a pronounced weld seam.</p>	<p>Grind the raised welds flush with the interior and exterior pipe/tubing surfaces 2 inches (50 mm) back from the pipe/tubing end.</p>
Pipe/tubing flare is excessive.	<p>Pipe/tubing support is not adjusted properly for a long length of pipe/tubing.</p> <p>Tool is tilted backward while grooving a long length of pipe/tubing.</p> <p>Incorrect pipe/tubing support positioning of a long length of pipe/tubing. Pipe/tubing is "over-tracking."</p>	<p>Refer to the "Long Pipe/Tubing Lengths" section on page 15.</p> <p>Refer to the "Long Pipe/Tubing Lengths" section on page 15.</p> <p>Re-position the pipe/tubing support. Refer to the "Long Pipe/Tubing Lengths" section on page 15.</p>

TOOL RATINGS

VE26S FOR STEEL AND SCHEDULE 40 STAINLESS STEEL PIPE VE26P FOR ALUMINUM AND PVC PIPE

Pipe Size		Nominal Wall Thickness Dimensions – inches (millimeters) *							
Nominal Size inches	Actual Outside Diameter inches (mm)	VE26S				VE26P			
		Steel Pipe Wall Thickness (Schedules 5, 10, and 40)		Stainless Steel Pipe Wall Thickness (Schedule 40)		Aluminum Pipe Wall Thickness (Schedules 5, 10, and 40)		PVC Pipe Wall Thickness (Schedule 40)	
		Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
2	2.375 60,3	0.065 1,7	0.154 3,9	0.154 3,9	0.154 3,9	0.065 1,7	0.154 3,9	0.154 3,9	0.154 3,9
2½	2.875 73,0	0.083 2,1	0.203 5,2	0.203 5,2	0.203 5,2	0.083 2,1	0.203 5,2	0.203 5,2	0.203 5,2
3	3.500 88,9	0.083 2,1	0.216 5,5	0.216 5,5	0.216 5,5	0.083 2,1	0.216 5,5	0.216 5,5	0.216 5,5
4	4.500 114,3	0.083 2,1	0.120 3,0	– –	– –	0.083 2,1	0.120 3,0	0.237 6,0	0.237 6,0
5	5.563 141,3	0.109 2,8	0.134 3,4	– –	– –	0.109 2,8	0.134 3,4	0.258 6,6	0.258 6,6
6	6.625 168,3	0.109 2,8	0.134 3,4	– –	– –	0.109 2,8	0.134 3,4	– –	– –

This tool rating table is applicable only to ANSI piping and is based upon the following material grades. Refer to the appropriate international standard for other systems.

Steel – Brinell Hardness Number (BHN) of 180 BHN and less.

Stainless Steel – Types 304/304L and Types 316/316L

Aluminum – ASTM B-210, Grades 6061-T4 and 6063-T4

PVC Type I, Grade I (PVC 1120)

PVC Type I, Grade II (PVC 1220)

PVC Type II, Grade I (PVC 2116)

* All minimum and maximum wall thicknesses are nominal

VE26SS FOR LIGHT-WALL STAINLESS STEEL PIPE

Pipe Size		Nominal Wall Thickness Dimensions – inches (millimeters) *	
Nominal Size inches	Actual Outside Diameter inches (mm)	Stainless Steel (Types 304, 304L, 316, and 316L)	
		Min.	Max.
2	2.375 60,3	0.065 1,7	0.109 2,8
2½	2.875 73,0	0.083 2,1	0.120 3,0
3	3.500 88,9	0.083 2,1	0.120 3,0
4	4.500 114,3	0.083 2,1	0.120 3,0
5	5.563 141,3	0.109 2,8	0.134 3,4
6	6.625 168,3	0.109 2,8	0.134 3,4

* All minimum and maximum wall thicknesses are nominal

VE26C FOR CTS US STANDARD – ASTM DRAWN COPPER TUBING

Nominal Size inches	Actual Outside Diameter inches (mm)	Nominal Wall Thickness Dimensions – inches (millimeters) *	
		Copper Tubing Wall Thickness ‡	
		Min.	Max.
2	2.125 54,0	0.042 1,1	0.083 2,1
2½	2.625 66,7	0.065 1,7	0.095 2,4
3	3.125 79,4	0.045 1,1	0.109 2,8
4	4.125 104,8	0.058 1,5	0.134 3,4
5	5.125 130,2	0.072 1,8	0.160 4,1
6	6.125 155,6	0.083 2,1	0.192 4,9

‡ ASTM B-306, Type DWV and ASTM B-88, Types K, L, M copper tubing

* All minimum and maximum wall thicknesses are nominal

VE26AC FOR AUSTRALIAN STANDARD – AS 1432 DRAWN COPPER TUBING

Nominal Size mm	Actual O.D. mm/ inches	Nominal Wall Thickness Dimensions – inches (millimeters) *	
		Copper Tubing Wall Thickness ‡	
		Min.	Max.
DN 50	50,8 2.000	0,9 0.035	1,6 0.063
DN 65	63,5 2.500	0,9 0.035	1,6 0.063
DN 80	76,2 3.000	1,2 0.047	2,0 0.079
DN 100	101,6 4.000	1,2 0.047	2,0 0.079
DN 125	127,0 5.000	1,4 0.055	2,0 0.079
DN 150	152,4 6.000	1,6 0.063	2,6 0.102

‡ Types A, B, and D

* All minimum and maximum wall thicknesses are nominal


VE26EC FOR EUROPEAN STANDARD – EN 1057 DRAWN COPPER TUBING

Nominal Size/ Actual O.D. mm	Nominal Wall Thickness Dimensions – inches (millimeters) *	
	Copper Tubing Wall Thickness	
	Min.	Max.
54	1,2 0.047	2,0 0.079
64	2,0 0.079	2,0 0.079
66,7	1,2 0.047	2,0 0.079
76,1	1,5 0.059	2,0 0.079
88,9	2,0 0.079	2,0 0.079
108	1,5 0.059	2,5 0.098
133	1,5 0.059	3,0 0.188
159	2,0 0.079	3,0 0.188

NOTE: The European Standard (EN 1057) replaces the British Standard (BS 2871) and DIN Standard (DIN 1786). However, to ensure proper coupling performance, refer to Tables X and Y in the British Standard (BS 2871).

* All minimum and maximum wall thicknesses are nominal

EXPLANATION OF CRITICAL ROLL GROOVE DIMENSIONS

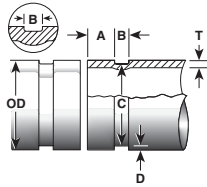

Standard Roll Groove

Outside Diameter (“OD”) Dimension – The outside diameter of roll grooved pipe must not vary from the specifications listed in the following tables. The maximum allowable tolerance from square-cut pipe ends is 0.030 inch (0,8 mm) for 2 – 3-inch sizes and 0.045 inch (1,1 mm) for 4 – 6-inch sizes. This is measured from the true square line.

“A” Dimension – The “A” dimension, or the distance from the pipe end to the groove, identifies the gasket seating area. This area must be free from indentations, projections, and roll marks from the pipe end to the groove to provide a leak-tight seal for the gasket.

“B” Dimension – The “B” dimension, or groove width, controls expansion and angular deflection by the distance it is located from the pipe and its width in relation to the housings’ “key” width.

“C” Dimension – The “C” dimension is the proper diameter at the base of the groove. This dimension must be within the diameter’s tolerance and concentric with the OD for proper coupling fit. The groove must be of uniform depth for the entire pipe circumference.

“D” Dimension – The “D” dimension is the normal depth of the groove and is a reference for a “trial groove” only. Variations in pipe OD affect this dimension and must be altered, if necessary, to keep the “C” dimension within tolerance. This groove must conform to the “C” dimension.

“F” Dimension (Standard Roll Groove Only) – Maximum allowable pipe-end flare diameter is measured at the extreme pipe-end diameter.

“T” Dimension – The “T” dimension is the lightest grade (minimum, nominal wall thickness) of pipe that is suitable for roll grooving (except for PVC pipe).

ROLL GROOVE SPECIFICATIONS

VE26S FOR STEEL AND SCHEDULE 40 STAINLESS STEEL PIPE VE26SS FOR LIGHT-WALL STAINLESS STEEL PIPE VE26P FOR ALUMINUM AND PVC PIPE

Pipe Size		Dimensions – inches (millimeters)														
Nom. Size inches	Actual OD Inches (mm)	Pipe Outside Diameter		Gasket Seat "A"			Groove Width "B"			Groove Diameter "C"			Groove Depth "D" (ref.)	Min. Allow. Wall Thick. "T" *	Max. Allow. Flare Dia. "F"	
		Max.	Min.	Basic	Max.	Min.	Basic	Max.	Min.	Basic	Max.	Min.				
2	2.375	2.399	2.351	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	2.250	2.235	0.063	0.049	2.48
	60.3	60.9	59.7	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	57.2	56.8	1.6	1.2	63.0
2 1/2	2.875	2.904	2.846	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	2.720	2.702	0.078	0.078	2.98
	73.0	73.8	72.3	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	69.1	68.6	2.0	2.0	75.7
3	3.500	3.535	3.469	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	3.344	3.326	0.078	0.078	3.60
	88.9	89.8	88.1	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	84.9	84.5	2.0	2.0	91.4
4	4.500	4.545	4.469	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	4.334	4.314	0.083	0.078	4.60
	114.3	115.4	113.5	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	110.1	109.6	2.2	2.0	116.8
5	5.563	5.619	5.532	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	5.395	5.373	0.084	0.078	5.66
	141.3	142.7	140.5	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	137.0	136.5	2.2	2.0	143.8
6	6.625	6.688	6.594	0.625	0.656	0.594	0.375	0.313	0.344	0.375	0.313	6.455	6.433	0.085	0.078	6.73
	168.3	169.9	167.5	15.9	16.7	15.1	9.5	8.0	8.7	9.5	8.0	164.0	163.4	2.2	2.8	170.9

* Except for PVC and stainless steel pipe. Refer to the "Tool Ratings" table on page 28.

ROLL GROOVE SPECIFICATIONS

COPPER TUBING TO CTS US STANDARD – ASTM B-88 (VE26C)

Copper Tubing Size	Dimensions – inches/millimeters											
	Copper Tubing Outside Dia. ‡		Gasket Seat “A”			Groove Width “B”		Groove Diameter “C”		Groove Depth “D” (Ref. Only)	Min. Allow. Wall Thick. “T”	Max. Allow. Flare Dia. “F”
	Max.	Min.	Basic	Max.	Min.	Max.	Min.	Max.	Min.			
2 54,0	2.127 54,0	2.123 53,9	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	2.029 51,5	2.009 51,0	0.048 1,2	DWV*	2.220 56,4
2 1/2 66,7	2.627 66,7	2.623 66,6	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	2.525 64,1	2.505 63,6	0.050 1,2	0.065 1,7	2.720 69,1
3 79,4	3.127 79,4	3.123 79,3	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	3.025 76,8	3.005 76,3	0.050 1,2	DWV*	3.220 81,8
4 104,8	4.127 104,8	4.123 104,7	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	4.019 102,1	3.999 101,6	0.053 1,4	DWV*	4.220 107,2
5 130,2	5.127 130,2	5.123 130,1	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	4.999 127,0	4.979 126,5	0.063 1,6	DWV*	5.220 132,6
6 155,6	6.127 155,6	6.123 155,5	0.610 15,5	0.640 16,3	0.580 14,7	0.330 8,4	0.300 7,6	5.999 152,3	5.979 151,9	0.063 1,6	DWV*	6.220 158,0

‡ The outside diameter of roll grooved copper tubing cannot vary from the tolerance listed. The maximum allowable tolerance from square cut ends is 0.030 inch (0,8 mm) for 2 – 3 inch (54,0 – 79,4 mm) sizes and 0.045 inch (1,1 mm) for 4 – 6 inch (104,8 – 155,6 mm) sizes; this is measured from the true square line.

* ASTM B-306 drain-waste and vent (DWV) is the minimum wall thickness of copper tubing that can be roll grooved.

COPPER TUBING TO EUROPEAN STANDARD – EN 1057 (VE26C)

Actual Size ‡ mm	Dimensions – millimeters/inches										Groove Depth “D” (Ref. Only)	Max. Allow. Flare Dia. “F”
	Actual OD *		Gasket Seat “A”			Groove Width “B”		Groove Dia. “C”				
	Max.	Min.	Basic	Max.	Min.	Max.	Min.	Max.	Min.			
54	54,07 2.129	53,93 2.123	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	51,51 2.028	51,00 2.008	1,25 0.049	56,39 2.220	
64	64,07 2.522	63,93 2.517	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	61,47 2.420	60,96 2.400	1,27 0.050	66,41 2.615	
66,7	66,77 2.629	66,63 2.623	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	64,14 2.525	63,63 2.505	1,27 0.050	69,09 2.720	
76,1	76,17 2.999	76,03 2.993	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	73,41 2.890	72,90 2.870	1,35 0.053	78,61 3.095	
88,9	88,97 3.496	88,83 3.497	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	85,70 3.374	85,19 3.354	1,60 0.063	91,63 3.607	
108	108,07 4.255	107,93 4.249	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	104,80 4.126	104,29 4.106	1,60 0.063	110,54 4.352	
133	133,20 5.244	132,80 5.228	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	129,29 5.090	128,78 5.070	1,85 0.073	135,79 5.346	
159	159,20 6.280	158,80 6.252	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	155,30 6.114	154,79 6.094	1,85 0.073	161,80 6.370	

‡ European Standard Copper Tubing: EN 1057 drawn copper tubing size

* The outside diameter of roll grooved copper tubing cannot vary from the tolerance listed. The maximum allowable tolerance from square cut ends is 0,8 mm (0.030 inch) for 54 – 88,9 mm sizes and 1,1 mm (0.045 inch) for 108 – 159 mm sizes; this is measured from the true square line.

ROLL GROOVE SPECIFICATIONS

COPPER TUBING TO AUSTRALIAN STANDARD – AS 1432 (VE26AC)

Nominal Size ‡ mm	Dimensions – millimeters/inches									Groove Depth “D” (Ref. Only)	Max. Allow. Flare Dia. “F”
	Actual OD *		Gasket Seat “A”			Groove Width “B”		Groove Dia. “C”			
	Max.	Min.	Basic	Max.	Min.	Max.	Min.	Max.	Min.		
DN 50	50,80 2.000	50,67 1.995	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	48,21 1.898	47,70 1.878	1,25 0.049	53,06 2.089
DN 65	63,50 2.500	63,35 2.494	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	60,88 2.397	60,38 2.377	1,27 0.050	65,83 2.592
DN 80	76,20 3.000	76,02 2.993	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	73,56 2.896	73,05 2.876	1,27 0.050	78,51 3.091
DN 100	101,60 4.000	101,35 3.990	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	98,78 3.889	98,27 3.869	1,35 0.053	103,88 4.090
DN 125	127,00 5.000	126,75 4.990	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	123,67 4.869	123,16 4.849	1,60 0.063	128,77 5.070
DN 150	152,40 6.000	152,10 5.988	15,87 0.625	16,64 0.655	15,11 0.595	8,38 0.330	7,62 0.300	149,05 5.868	148,54 5.848	1,60 0.063	154,66 6.089

‡ Nominal AS 1432 drawn copper tubing size

* The outside diameter of roll grooved copper tubing cannot vary from the tolerance listed. The maximum allowable tolerance from square cut ends is 0,8 mm (0.030 inch) for DN 50 – 80 mm sizes and 1,1 mm (0.045 inch) for DN 100 – 150 mm sizes; this is measured from the true square line.



Victaulic Tool Company
Tool Shipments:
1326 Tatamy Road, Easton, PA 18045-7400
Sales & Lease Payments:
P.O. Box 8538-244, Phila., PA 19171-0244

Victaulic Companies

CUSTOMER CARE CENTER

Phone: 1-800-PICK-VIC (1-800-742-5842)
FAX: 610/923-3090
e-mail: pickvic@victaulic.com

WORLD HEADQUARTERS

P.O. Box 31 • Easton, PA 18044-0031
4901 Kesslersville Road • Easton, PA 18040 USA
Phone: 610/559-3300 • Fax: 610/250-8817

VICTAULIC TOOL COMPANY

P.O. Box 31 • Easton, PA 18044-0031
Phone: 610/559-3300 • Fax: 610/923-3090
e-mail: victools@victaulic.com

VICTAULIC CONSTRUCTION PIPING SERVICES DIV.

1818 Vultee Street • Allentown, PA 18103
Phone: 610/559-3488 • Fax: 610/923-3170
e-mail: cps@victaulic.com

Victaulic Around the World

VICTAULIC COMPANY OF AMERICA

P.O. Box 31 • Easton, PA 18044-0031
Phone: 610/559-3300 • Fax: 610/250-8817
e-mail: victaulic@victaulic.com

VICTAULIC COMPANY OF CANADA

123 Newkirk Road • Richmond Hill, ON L4C 3G5
Phone: 905/884-7444 • Fax: 905/884-9774
e-mail: viccanada@victaulic.com

VICTAULIC EUROPE

Prijkelstraat 36 • 9810 Nazareth, Belgium
Phone: 32-9-381-15-00 • Fax: 32-9-380-44-38
e-mail: viceuro@victaulic.be

VICTAULIC AMERICA LATINA

P.O. Box 31 • Easton, PA USA 18044-0031
4901 Kesslersville Road • Easton, PA USA 18040
Phone: 610/559-3300 • Fax: 610/559-3608
e-mail: vical@victaulic.com

VICTAULIC ASIA-PACIFIC

Room 707, No. 600 Min Sheng Road
Pudong, Shanghai 200135, China
Phone: 86-21-58855151 • Fax: 86-21-58851298
e-mail: vicap@victaulic.com

www.victaulic.com